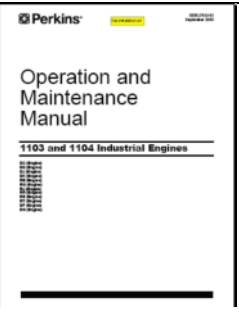 
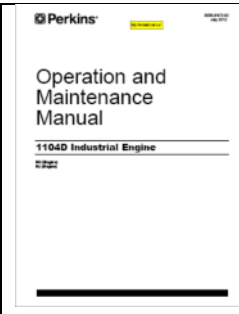 
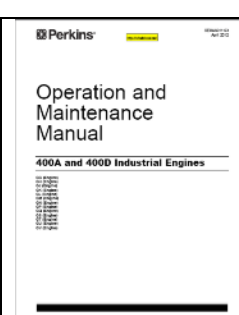 
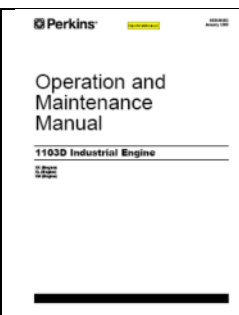 
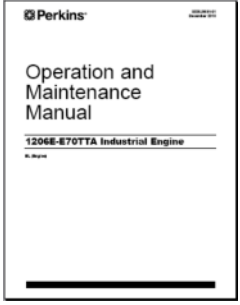 
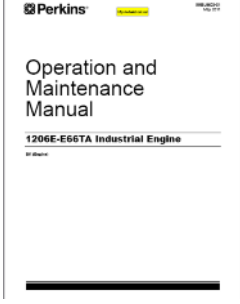 



# PERKINS

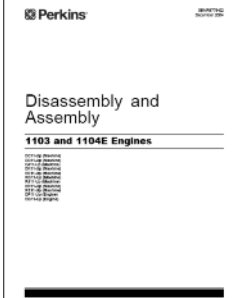 
## SERVICE AND PARTS MANUALS

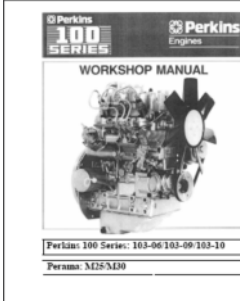 
<b><u>0001</u></b>	<b>84</b>	<b>Operation and Maintenance Manual 1103 &amp; 1104 Industrial Engines</b> SEBU7833-03	
<b>PDF</b>			
<b><u>0002</u></b>	<b>110</b>	<b>Operation and Maintenance Manual 1104 D Industrial Engines</b> SEBU8172-02 July 2012	
<b>PDF</b>			
<b><u>0003</u></b>	<b>98</b>	<b>Operation and Maintenance Manual 400 A and 400 D Industrial Engines</b> SEBU8311-03 April 2012	
<b>PDF</b>			
<b><u>0004</u></b>	<b>76</b>	<b>Operation and Maintenance Manual 1103 D Industrial Engines</b> SEBU8352 January 2008	
<b>PDF</b>			


<b><u>0005</u></b>	<b>134</b>	<b>Operation and Maintenance Manual 1206E-E70TTA Industrial Engines SEBU8601-01 December 2010</b>	
<b>PDF</b>			

<b><u>0006</u></b>	<b>120</b>	<b>Operation and Maintenance Manual 1206E-E66TA Industrial Engines SEBU8603-01 May 2011</b>	
<b>PDF</b>			


<b><u>0007</u></b>	<b>52</b>	<b>Parts Manual 4.154 Marine NAPB-53 August , 1978</b>	
<b>PDF</b>			

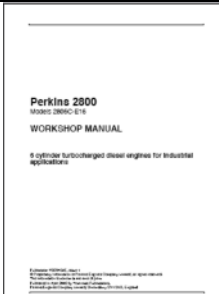 
<b><u>0008</u></b>	<b>136</b>	<b>Disassembly and Assembly 1103 &amp; 1104 E Engines SENR9779-02 December 2004</b>	
<b>PDF</b>			

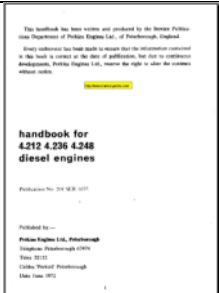 
<b><u>0009</u></b>	<b>75</b>	<b>Workshop Manual 100 Series 103-06,103-09,103-10 (Perama M25/M30)</b>	
<b>PDF</b>			

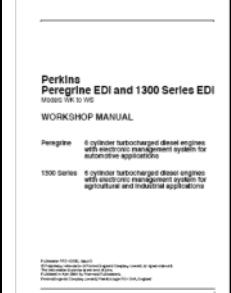 
<b><u>0010</u></b>	<b>40</b>	<b>Users Handbook Perkins 1300 Series EDI</b>	
<b>PDF</b>		<b>TPD.1352 E May 1998</b>	

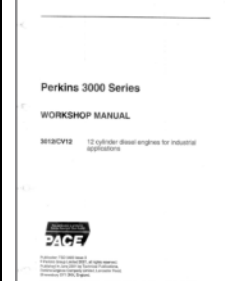 
<b><u>0011</u></b>	<b>51</b>	<b>Installation Manual Perkins Sabre M 65 &amp; M85 T</b>	
<b>PDF</b>		<b>TPD 1399E December 2007</b>	


<b><u>0012</u></b>	<b>158</b>	<b>Workshop Manual Perkins 2300 Series</b>	
<b>PDF</b>		<b>TSD 3455E September 2002</b>	

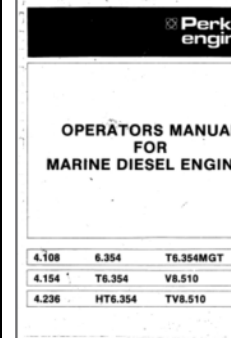 
<b><u>0013</u></b>	<b>158</b>	<b>Workshop Manual Perkins 2800</b>	
<b>PDF</b>		<b>TSD3450E April 2002</b>	


<b><u>0014</u></b>	<b>62</b>	<b>Handbook 4.212,4.236,4.248</b>	
<b>PDF</b>		<b>201 SER 1075 June 1972</b>	

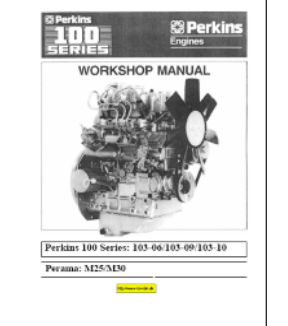 
<b><u>0015</u></b>	<b>264</b>	<b>Workshop Manual Peregrine EDI 1300 Series EDI TPD 1353 E April 2001</b>	
<b>PDF</b>			

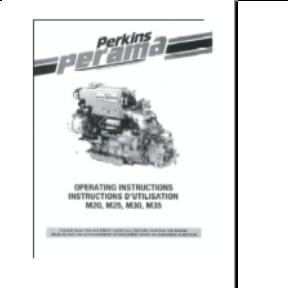 
<b><u>0016</u></b>	<b>264</b>	<b>Workshop Manual 3000 Series-3012/CV12 TPD 3420 June 2001</b>	
<b>PDF</b>			

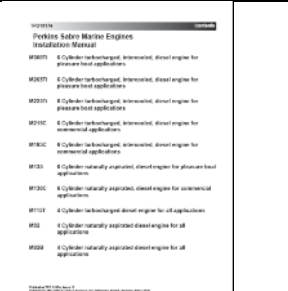 
<b><u>0017</u></b>	<b>114</b>	<b>Workshop Manual 4.108,4.107,4.99 601 SER 0383 1072 1983</b>	
<b>PDF</b>			

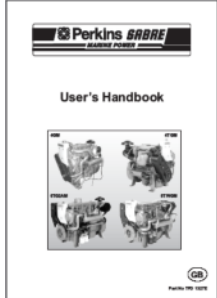 
<b><u>0018</u></b>	<b>72</b>	<b>Operation Manual 4.108,4.154,4.236 6.354,t6.354,HT6.354 T6.354MGT,V8.510 TV 8.510 201 SER 1068A 1978</b>	
<b>PDF</b>			


<b><u>0019</u></b>	<b>77</b>	<b>Workshop Manual 100 Series 102-04/102-05/103- 06/103-07/103-09/103-10 (Perama M20/M25/M30)</b>	
<b>PDF</b>			


<b><u>0020</u></b>	<b>80</b>	<b>Workshop Manual 100 Series 103-06/103-09/103-10 Perama (M25/M30)</b>	
<b>PDF</b>			

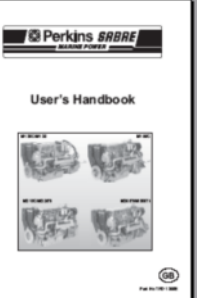 
<b><u>0021</u></b>	<b>6</b>	<b>Operating Instructions M20,M25,M30,M35 284/7/90</b>	
<b>PDF</b>			


<b><u>0022</u></b>	<b>86</b>	<b>Installation Manual Perkins Sabre Marine Engines TPD 1317E May 2007</b>	
<b>PDF</b>			

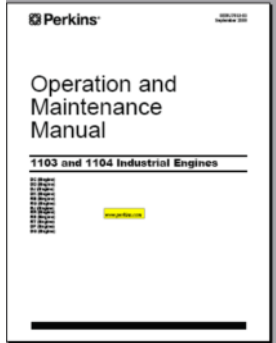 
<b><u>0023</u></b>	<b>65</b>	<b>Users Handbook Perkins Sabre 4GM,4TGM,6TG2AM,6TWGM TPD 1327E December 2007</b>	
<b>PDF</b>			

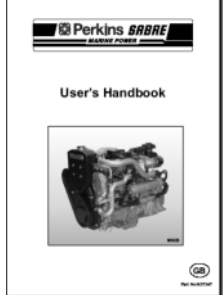 
<b><u>0024</u></b>	<b>56</b>	<b>Users Handbook Perkins 1000 Series TPD 1329E July 2000</b>	
<b>PDF</b>			

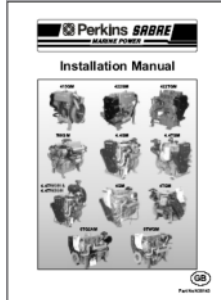 
<b><u>0025</u></b>	<b>40</b>	<b>Users Handbook Perkins 1300 Edi Series TPD 1352E November 2011</b>	
<b>PDF</b>			

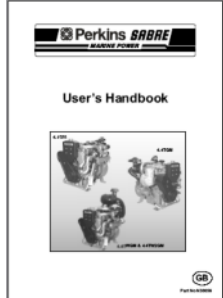 
<b><u>0026</u></b>	<b>72</b>	<b>Users Handbook Perkins Sabre M130C,M135,M185C,M215, M225Ti,M265Ti,M300Ti TPD 1369E December 2008</b>	
<b>PDF</b>			

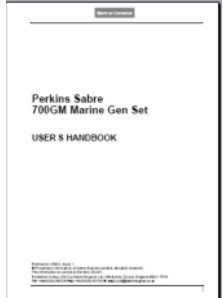 
<b><u>0027</u></b>	<b>62</b>	<b>Users Handbook 2800 Series, 2806A-E18,2806C-E18 TPD 1516E, May 2004</b>	
<b>PDF</b>			

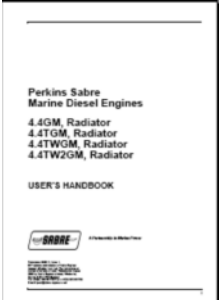 
<b><u>0028</u></b>	<b>84</b>	<b>Operation and Maintenance Manual 1103 &amp; 1104 Industrial Engines</b> SEBU7833-03 September 2008	
<b>PDF</b>			


<b><u>0029</u></b>	<b>64</b>	<b>Users Handbook M 92 B</b> N 37347 August 2007	
<b>PDF</b>			


<b><u>0030</u></b>	<b>96</b>	<b>Installation Manual Perkins Sabre Auxiliary Engines</b> N38143 May 2007	
<b>PDF</b>			

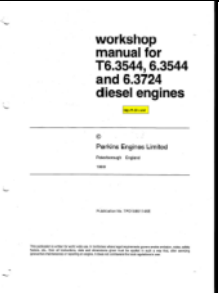 
<b><u>0031</u></b>	<b>74</b>	<b>Users Handbook Perkins Sabre Auxiliary Engines</b> N38056 July 2007	
<b>PDF</b>			


<b><u>0032</u></b>	<b>46</b>	<b>Users Handbook Perkins Sabre 700 GM Marine Gen Set</b> 35943 May 2002	
<b>PDF</b>			

<b><u>0033</u></b>	<b>60</b>	<b>Users Handbook 4.4 GM,4.4 TGM,4.4 TWGM,4.4 TW2GM Radiator N 38913 August 2006</b>	
<b>PDF</b>			


<b><u>0034</u></b>	<b>124</b>	<b>Users Handbook 415GM,422GM,422TGM, 4.4GM,4.4TGM,4.4TWGM 4.4TW2GM N 39523 August 2007</b>	
<b>PDF</b>			

<b><u>0035</u></b>	<b>93</b>	<b>Workshop Manual 200 Series Diesel Engines 4.135,4.154,4.182 601 SER 03821176 1982</b>	
<b>PDF</b>			

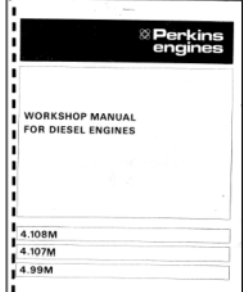 
<b><u>0036</u></b>	<b>161</b>	<b>Workshop Manual T6.3544,6.3544,6.3724 TPD10891146E 1989</b>	
<b>PDF</b>			

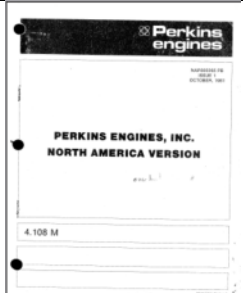 
<b><u>0037</u></b>	<b>148</b>	<b>Service Manual 100 Series 103-12/13/15,104-19 6SE904 9006</b>	
<b>PDF</b>			

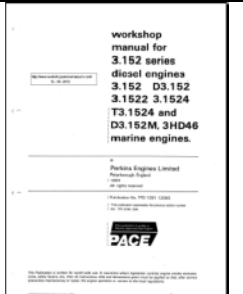 



<b><u>0038</u></b>	<b>108</b>	<b>Workshop Manual 4.154</b>	
<b>PDF</b>		<b>601 SER 1076/1024 1976</b>	


<b><u>0039</u></b>	<b>290</b>	<b>Workshop Manual Perkins New 1000 Series</b>	
<b>PDF</b>		<b>TPD 1350E March 2000</b>	

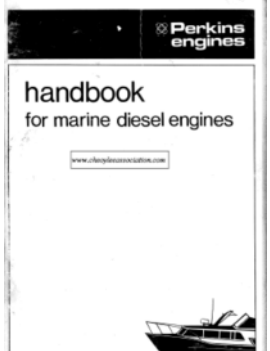 
<b><u>0040</u></b>	<b>134</b>	<b>Workshop Manual 4.108,4.107,4.99</b>	
<b>PDF</b>		<b>601 SER 0478 1088 1978</b>	


<b><u>0041</u></b>	<b>106</b>	<b>Parts Manual 4.108 M</b>	
<b>PDF</b>		<b>NAP000265 PB October,1981</b>	

<b><u>0042</u></b>	<b>102</b>	<b>Workshop Manual 3.152 Series</b>	
<b>PDF</b>		<b>TPD 1091 1208E 1991</b>	

<b><u>0043</u></b>	<b>45</b>	<b>Installation Manual</b> <b>4.107 &amp; 4.108</b> <b>201 SER 0676 1108</b>	
--------------------	-----------	--	---

<b><u>0044</u></b>	<b>85</b>	<b>Workshop Manual</b> <b>L4</b> <b>5675</b> <b>November.1956</b>	
--------------------	-----------	--	---

<b><u>0045</u></b>	<b>49</b>	<b>Handbook</b> <b>Marine Diesel Engines</b>	
--------------------	-----------	---	---

<b><u>0046</u></b>	<b>84</b>	<b>Operation and Maintenance Manual</b> <b>1104D (Mech)</b> <b>SEBU8325-01</b> <b>July 2012</b>	
--------------------	-----------	--	---